



WWW.SMITTYBILT.COM

Installation Instructions

Part #2820

Winch Shackle

NOTE: Read instructions entirely before assembling and installing this part.

Step 1: If equipped remove existing hook from cable or synthetic rope. Note: You may need to cut it off.

Step 2: Remove the snap ring using snap ring pliers and slide out pin. (Fig A)

Step 3: Free spool winch cable or rope out enough in order to slide shackle over eyelet. Insert pin up back into shackle making sure you go through eyelet. (Fig B) Re-install snap ring. Note: Make sure snap ring is "seated" correctly into the groove.



(Fig A)



(Fig B)

Step 4: Power winch rope or cable back "in" so shackle is snug/tight against fairlead (Fig C)

Step 5: Installation is now complete. (Fig D)



(Fig C)



(Fig D)

This shackle will accommodate most $\frac{3}{4}$ " – $\frac{7}{8}$ " D-rings. It is recommended not to leave them installed when not in use. Do not exceed rating of shackle or D-rings. Always follow winch operation and safety guidelines.

For Technical Support/Warranty Information please call 310-762-9944

Smittybilt, 400 West Artesia Blvd, Compton, CA 90220