



WWW.SMITTYBILT.COM

Installation Instructions



Standard Bucket/Low Back Front Seat

(Part #44801, 449xx)



NOTE: Read instructions entirely before assembling and installing this part.

Step 1: Remove old/current seat from riser by removing the 4 nuts securing it. They are located just under the seat riser (Save these for later use) It may be easier to remove entire seat and slider from vehicle in order to install new seat.

Step 2: Remove the sliders from the old seats. (Save these bolts for later use.) Note: To gain access to the rear two bolts, push slider arm down and move slider forward.

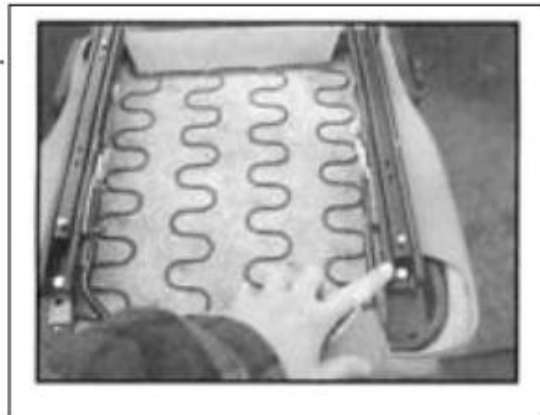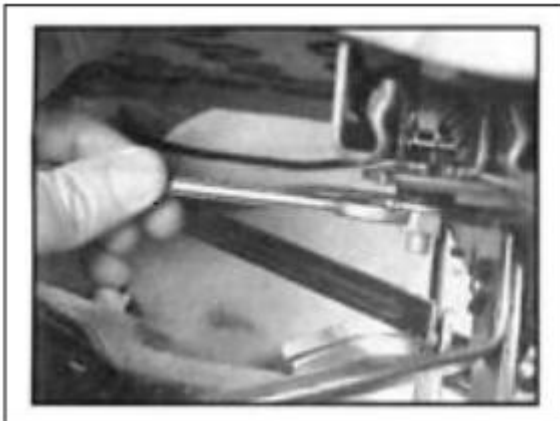

Step 3: Place the sliders you just removed onto the new seat. Re-use the spacers (if separate)

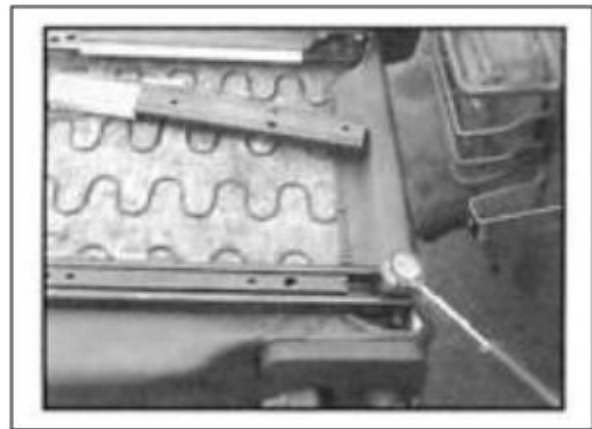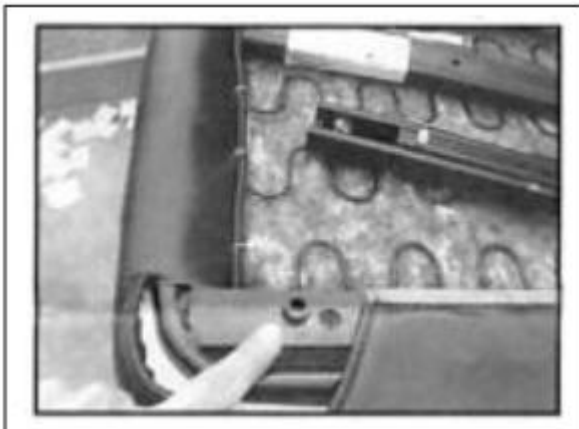

For Technical Support/Warranty Information please call 310-762-9944

Smittybilt, 400 West Artesia Blvd, Compton, CA 90220



WWW.SMITTYBILT.COM

Installation Instructions

Standard Bucket/Low Back Front Seat

(Part #44801, 449xx)

Step 4: Secure slider to seat using the previously removed bolts. The seat has multiple mount holes, this allows sliders/brackets from various Jeeps to be used. Find the correct pattern by placing the slider on the seat and positioning is so all four holes align with the holes in the seat.

Step 5: Place seat with sliders now attached back onto seat riser and secure with previously removed hardware. Make sure all hardware is completely secured.

Due to variances in riser/sliders and with the possibility of abnormal wear due to use and time, wear you may need to slightly open holes in O.E. parts.

NOTE: All 1997-2002 Wranglers require Adapter 49900 Driver Side or 49901 Passenger Side.

NOTE: All 2003-2006 Wranglers require Adapter 49902 Driver Side or 49903 Passenger Side.

For Technical Support/Warranty Information please call 310-762-9944

Smittybilt, 400 West Artesia Blvd, Compton, CA 90220